


# MODEL 810X SENDER BAR

NOT TO SCALE

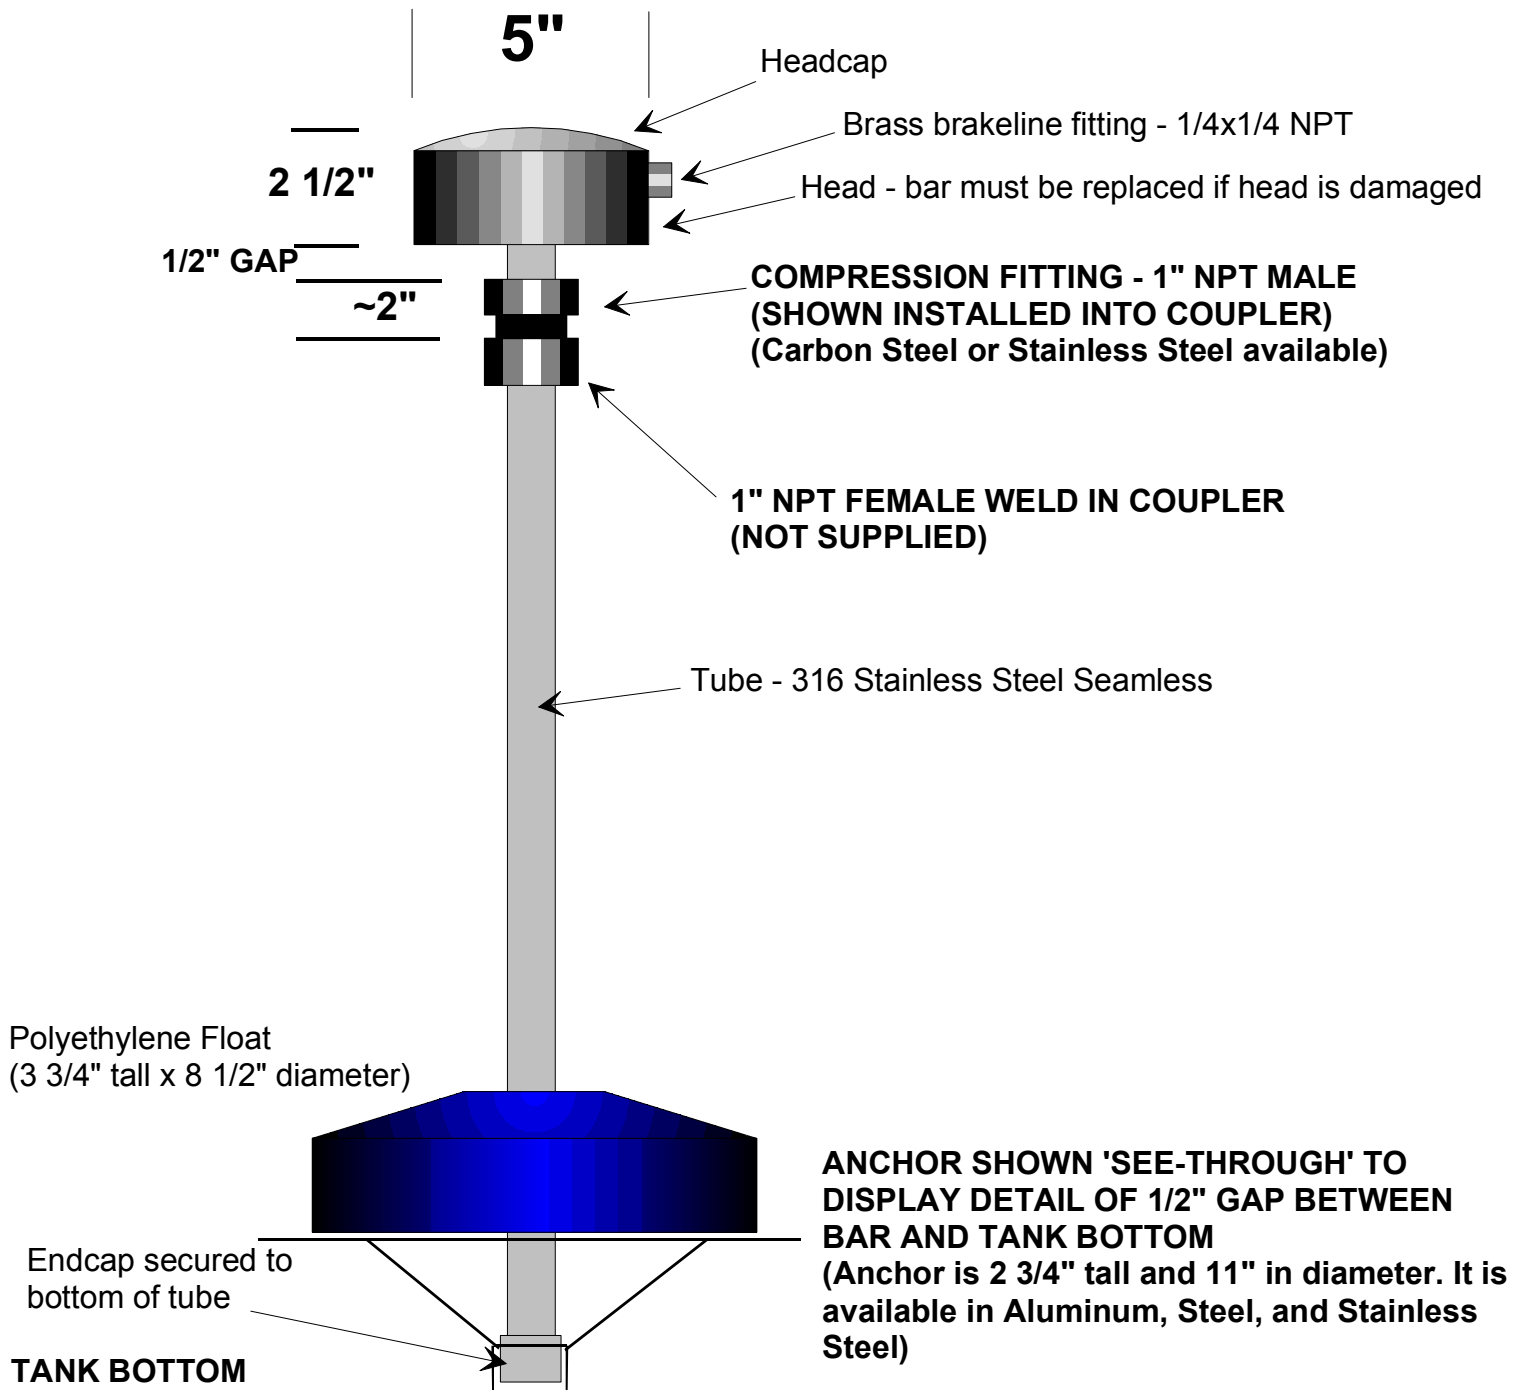

**NOTE: TO AID IN INSTALLATION THE WELDER MAY ATTACH TABS TO THE UNDERSIDE OF THE OUTER EDGE OF THE ANCHOR AND THEN WELD THE TABS TO THE TANK BOTTOM. WE RECOMMEND DOING THIS IN AT LEAST THREE PLACES AROUND THE CIRCUMFERENCE OF THE ANCHOR. THE TWO GROOVES (NOT SHOWN) IN THE BOTTOM OF THE CUP PORTION AT THE BASE OF ANCHOR ARE TO ALLOW FLUID TO DRAIN FROM WITHIN THE CUP.**