SEELEVEL Wiring Diagram **Model 709 Inside Display Panel** +12V Model 709 **GND* Second Display Panel** ☐ GND* in another location **GND*** Fresh LPG **Black Grey** LPG+ Existing wires GARNET * Note: all ground wiring must be Senders Pump LED indicator + connected to a common ground Ground Alarm output + source. +12V Power to monitor