


# SEELEVEL II™

## Wiring Diagram

Add a 709-BTP3 to existing system

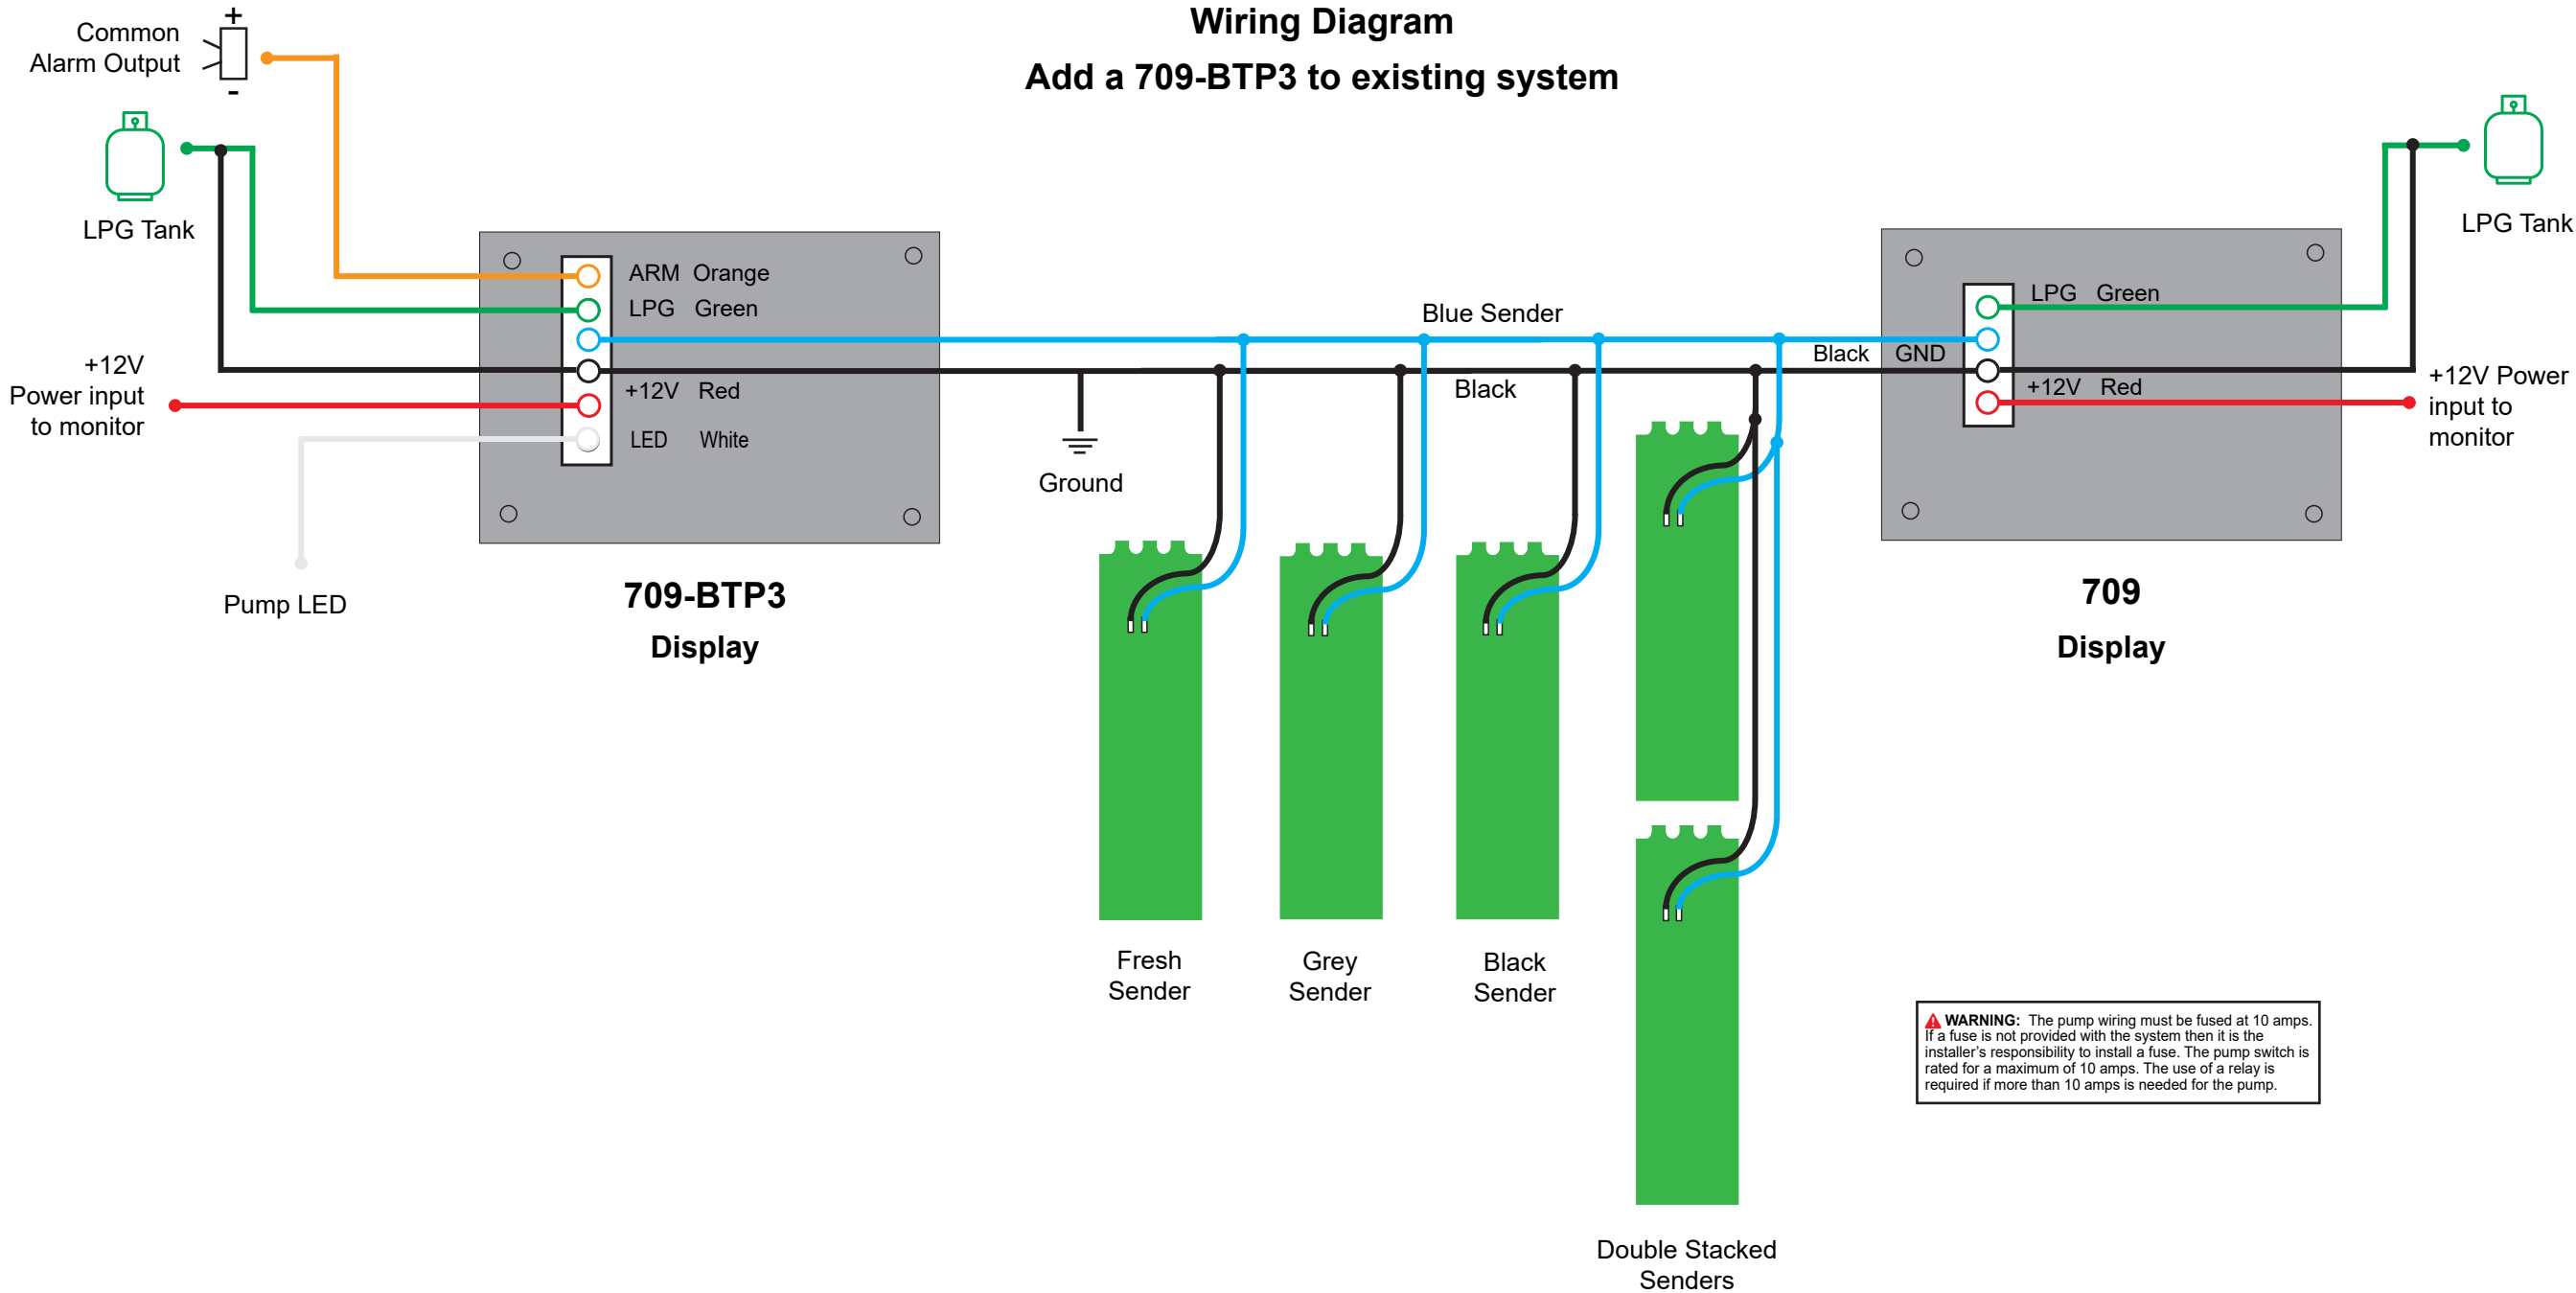

**WARNING:** The pump wiring must be fused at 10 amps. If a fuse is not provided with the system then it is the installer's responsibility to install a fuse. The pump switch is rated for a maximum of 10 amps. The use of a relay is required if more than 10 amps is needed for the pump.