


708-RVC H Wiring Diagram

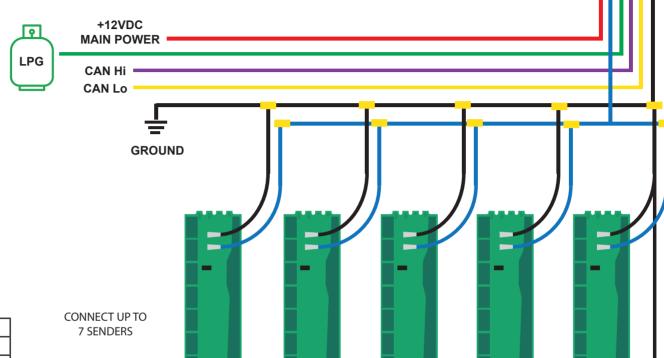

30000



Pigtail Wires

Pin Color Function Red Power +12V 2 Blue Tank Senders 3 LPG Tank Green CAN-Hi Purple Yellow CAN-Lo Black Ground

WARNING: All power circuits must be fused. If a fuse is not provided with the system then it is the installer's responsibility to install a fuse with the maximum rating of 7.5 amps. A relay is required if more than 7.5 amps needed for the pump.

DOUBLE-STACKED SENDER CONFIGURATION