


# SEELLEVEL II™

## 709-4 Wiring Diagram

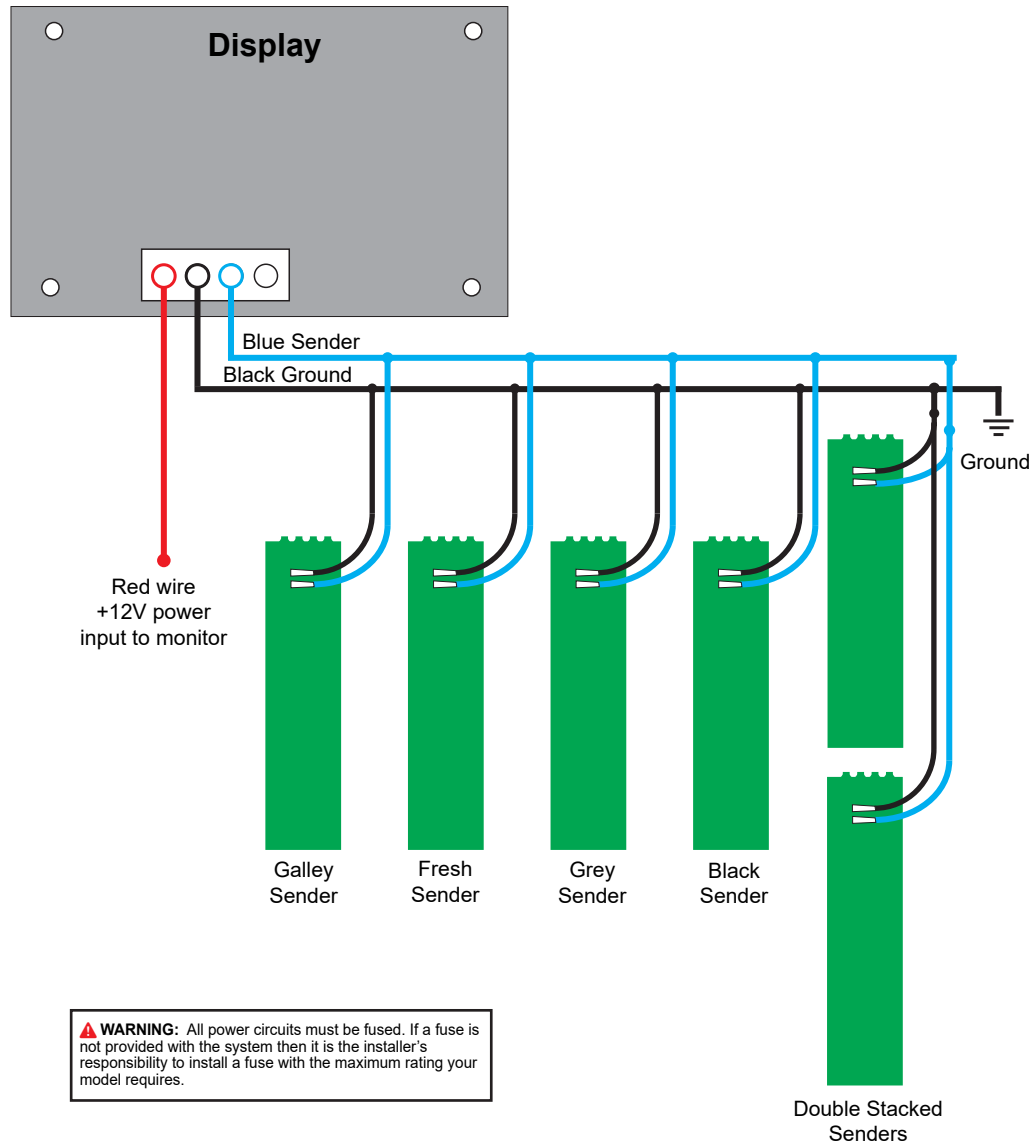

### Pigtail Wires

Pin	Color	Function
1	Red	+12V
2	Black	Ground
3	Blue	Tank Senders
4	-	-

**⚠ WARNING:** All power circuits must be fused. If a fuse is not provided with the system then it is the installer's responsibility to install a fuse with the maximum rating your model requires.