


SEELVEL II™

709-RVC NLP Wiring Diagram

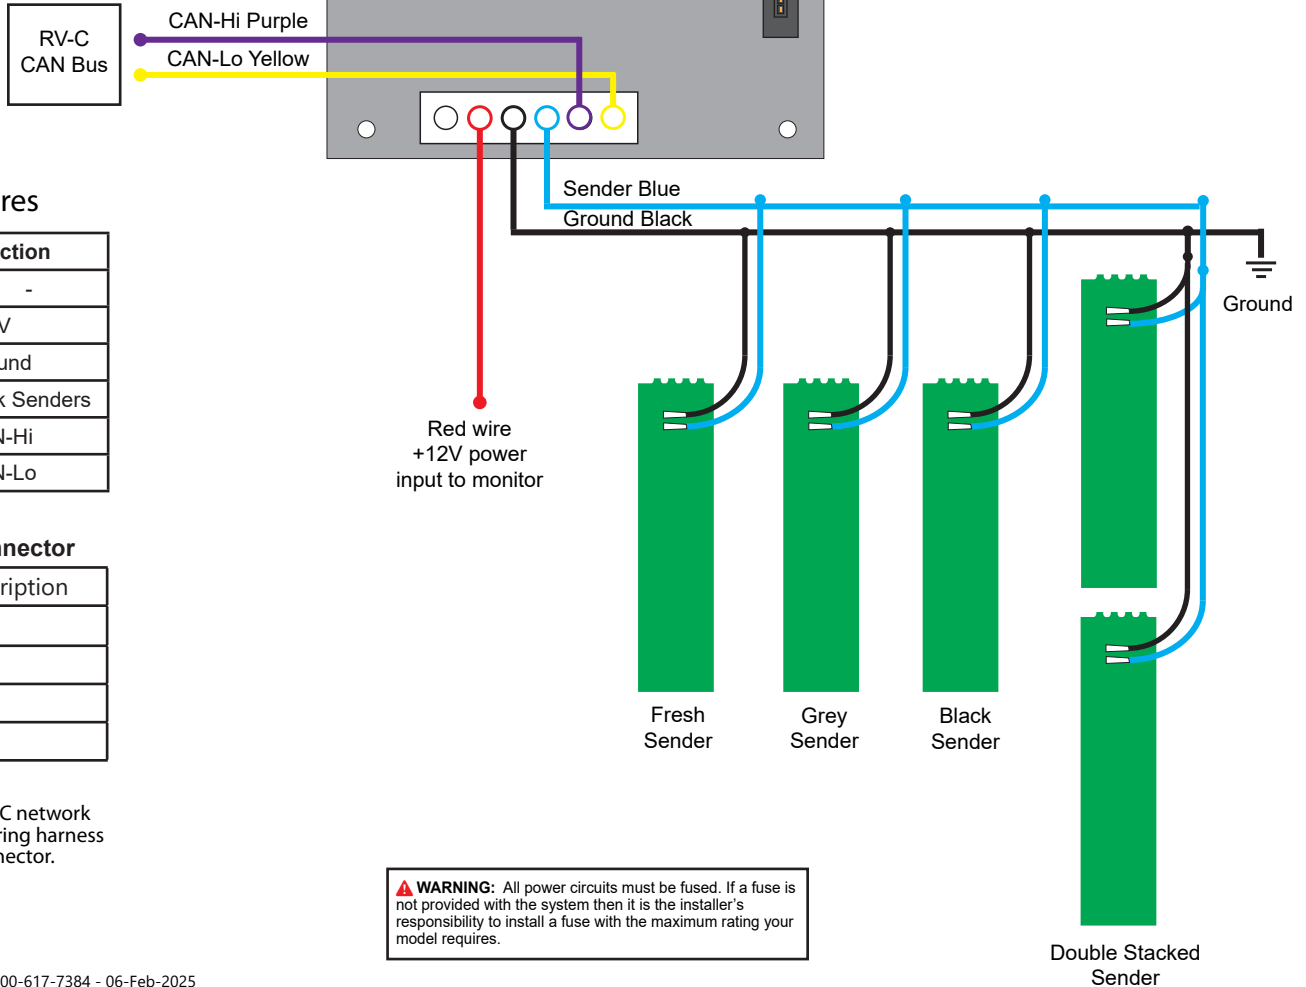

Pigtail Wires

Pin	Color	Function
1	-	-
2	Red	+12V
3	Black	Ground
4	Blue	Tank Senders
5	Purple	CAN-Hi
6	Yellow	CAN-Lo

RV-C CAN Connector

Pin	Signal Description
1	Open
2	CAN-Hi
3	CAN-Lo
4	Ground

Can connect to an RV-C network either using pigtail wiring or the RV-C 4-Pin Connector.

⚠ WARNING: All power circuits must be fused. If a fuse is not provided with the system then it is the installer's responsibility to install a fuse with the maximum rating your model requires.